


# AUTA 6000 KE-F 10

## 921 504-002

Spezial-Automat-Antenne  
 Speciale automatische-antenne  
 Special automatic antenna  
 Antenne automatique spéciale

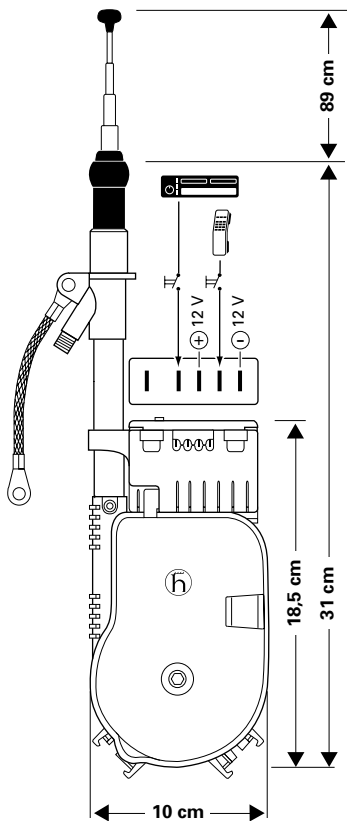

**Welcher Einbausatz zu welchem Fahrzeug?  
 Welke inbouwset bij welk wagentype?  
 Which mounting kit for which car type?  
 Quel kit de montage pour quel modèle de véhicule?**

Fahrzeugtyp • Wagentype Car • Voiture	Einbausatz • inbouwset Mounting kit • Kit de montage
Mercedes S 124	AUTA 74 FS 124
Mercedes W 124/2 9/88 →	AUTA 74 FW 124/2
Mercedes W 140	AUTA 74 FW 140
Mercedes W 201 5/87 →	AUTA 74 FW 201/2
Mercedes W 210	AUTA 74 FW 210
Opel Astra, Omega, Senator, Vectra	AUTA 77 OSVA

**Ausführliche Einbauanleitung liegt nur dem Einbausatz bei.  
 Uitvoerige montagehandleiding is alleen bij de inbouwset aanwezig.  
 Detailed mounting instructions are added to the mounting kit only.  
 Instructions de montage seulement ajoutées au kit de montage.**

### Beispiel / Voorbeeld / Example / Exemple

<b>Grundtyp</b> Basistype Basic model Modèle de base AUTA 6000 KE-F 10	<b>+</b> Einbausatz Inbouwset Mounting kit Kit de montage AUTA 77 F OSVA	<b>=</b> <b>Komplett-Antenne</b> Complete antenna Complete antenna Antenne complète Opel Astra, Omega, Senator, Vectra
--	--	---

