

022-00911


To VIN X199999	058 145 255 D	m	.7	18.80
From VIN X200001	058 145 255	m	.7	21.00
2000-02	058 145 255	m	.7	21.00
Inner				
1997-98	058 145 255 C	m	.7	26.35
1999				
To VIN X199999	058 145 255 C	m	.7	26.35
From VIN X200001	058 145 255 E	m	.7	23.85
2000-02	058 145 255 E	m	.7	23.85
2.8L Eng	96-97 078 145 255 F	m	.7	437.00
	98-02 078 145 255 H	m	.7	41.50
AWD Quattro				
1.8L Eng				
Outer				
1997				
To VIN V198000	058 145 255 D	m	.7	18.80
From VIN V198001	058 145 255	m	.7	21.00
1998-02	058 145 255	m	.7	21.00
Inner				
1997				
To VIN V198000	058 145 255 C	m	.7	26.35
From VIN V198001	058 145 255 E	m	.7	23.85
1998-02	058 145 255 E	m	.7	23.85
2.7L Eng	078 145 255 H	m	.7	41.50
2.8L Eng	078 145 255 H	m	.7	41.50
3 Brkt, Pump Mtg				
FWD				
1.8L Eng				
1997				
To VIN V180000	058 145 521 D	#2		231.80
From VIN V180001	058 145 521 C	#2		272.00
1998-02	058 145 521 C	#2		272.00
2.8L Eng				
1996-97	078 145 383 J	#2		38.00
1998-02	078 145 383 G	#2		36.85
AWD Quattro				
1.8L Eng				
1997				
To VIN V198000	058 145 521 D	#2		231.80
From VIN V198001	058 145 521 C	#2		272.00
1998-02	058 145 521 C	#2		272.00
2.7L Eng	058 145 521 C	#2		272.00
2.8L Eng				
1996-97	078 145 383 J	#2		38.00
1998-02	078 145 383 G	#2		36.85
#wPump Removed				
4 Hose, Pressure]				
1.8L Eng	97 8D1 422 893 K	m	#2.2	211.60
	98-02 8D1 422 893 AL	m	#2.2	205.45
2.7L Eng	8D1 422 893 BF	m	#2.2	211.60
2.8L Eng	96 8D1 422 893 M	m	#2.2	219.55
	98-02 8D1 422 893 AT	m	#2.2	257.20
5 Pipe, Pressure]				
2.7L Eng	8D0 422 893 D	m	#2.2	211.60
2.8L Eng				
1996-98	4A0 422 897 C	m	#2.2	69.25
1999				
To VIN X199999	4A0 422 897 C	m	#2.2	69.25
From VIN X200001	4B0 422 893 A	m	#2.2	193.90
2000-02	4B0 422 893 A	m	#2.2	193.90
#R&R Complete				
6 Hose, Suction]				
1.8L Eng				
1997				
To VIN V180000	8D0 422 887 J	m	.7	13.00
From VIN V180001	4B0 422 887 E	m	.7	20.05
1998-02	4B0 422 887 E	m	.7	20.05
2.7L Eng	8D0 422 887 AB	m	.7	13.00
2.8L Eng				
1996-98	8D0 422 887 R	m	.7	101.30
1999				
To VIN X199999	8D0 422 887 R	m	.7	101.30
From VIN X200001	8D0 422 887 L	m	.7	13.40
2000-02	8D0 422 887 L	m	.7	13.40
#Order by Application				
7 Reservoir Assy, Pump	8D0 422 371 H	m	1.0	50.50
8 Cap, Reservoir]	8D0 422 376 C			6.45
#Included w/Pump Reservoir Assy				
9 Grommet, Mount	431 129 669			2.30

10 Pipe, Cooler				
A4	8D0 422 885 K	m	.8	99.40
S4	8D0 422 885 L	m	.8	108.35
11 Hose, Pipe/Reservoir Return				
A4	8D0 422 891 C	m	.8	64.55
S4	4B0 422 891 C	m	.8	22.00
12 Hose, Pipe/Gear Return				
A4	8D1 422 891 J	m	.8	64.55
S4	8D1 422 891 L	m	.8	64.55

STEERING WHEEL/COLUMN


R&I Steering Column	m	1.5
O/H Steering Column (Includes R&I)	m	3.0

NOTE: All Parts in this section are included in overhaul unless noted otherwise.

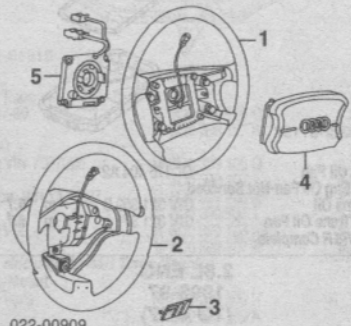

022-00909

Wheel, Steering]				
1 Std Wheel				
1996-97				
FWD				
w/Leather	4D0 419 091 J AS1	m	.8	740.00
w/o Leather	4A0 419 091 AS 01C	m	.8	488.30
AWD Quattro (Leather)	4D0 419 091 J AS1	m	.8	740.00
1998-99				
w/Leather (Leather)	4D0 419 091 AE AS1	m	.8	604.00
w/Multi-Function	4B0 419 091 CC AS1	m	.8	356.45
w/o Multi-Function	4B0 419 091 S AS1	m	.8	450.95
w/o Heater (Leather)				
2000-02				
w/Multi-Function (Leather)	4B0 419 091 AK 42H	m	.8	480.51
w/o Multi-Function (Leather)	4B0 419 091 AM 42H	m	.8	450.95
2 Sport Wheel				
1996-97				
FWD	4A0 419 091 T AS1	m	.8	740.00
AWD Quattro				
To 7-95	4A0 419 091 T AS1	m	.8	740.00
From 7-95	4A0 419 091 BA AS1	m	.8	740.00
1998-99				
Leather Trim	4B0 419 091 G 42H	m	.8	450.95
Wood Trim				
Copper	8D0 419 091 Q 2N0	m	.8	669.00
Nut Brown	8D0 419 091 P 42H	m	.8	669.00
Terra Brown	4B0 419 091 M 1SX	m	.8	669.00
2000-02				
w/Tiptronic	4B0 419 091 P 42H	m	.8	517.02
w/o Tiptronic	4B0 419 091 G 42H	m	.8	450.95
4A0 419 685 B				20.30
3 Emblem, Sport Wheel]				
#Order by Application				
4 Module, Driver Air Bag-See Air Bag System Section				
5 Spring, Spiral-See Air Bag System Section				

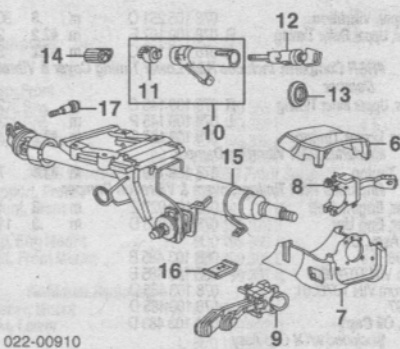

022-00910

6 Cover, Lock Hsg Upper]	96-97 8D1 953 515 A Q4	m	#1.4	18.50
	98-02 8D1 953 515 A Q4	m	#1.4	18.50
7 Cover, Lock Hsg Lower]	96-97 8D1 953 512 A Q4	m	#1.4	45.20
	98-02 8D1 953 512 C A Q4	m	#1.4	45.20
#Black listed, Order by Application				
8 Switch, Combination Wipe/Wash				
w/OBD				
1996-97	8D9 953 503 A 01C	m	#1.4	194.95
1998-02				
Sedan	4D0 953 503 B 01C	m	#1.4	108.95
Wagon	8D9 953 503 D 01C	m	#1.4	108.95
w/o OBD				
1996-97	8D9 953 503 01C	m	#1.4	108.95
1998-02				

Sedan	8D0 953 503 A 01C	m	#1.4	82.80
Wagon	8D9 953 503 E 01C	m	#1.4	82.80
9 Switch, Signal/Dimmer	96-98 4D0 953 513 C 01C	m	#1.4	137.35
	98-02 4D0 953 513 M 01C	m	#1.4	137.35
#R&R Complete, Includes R&I/R&R Steering Wheel				
10 Housing Assy, Lock				
Man Trans	96 4D0 905 851 A	m	#1.8	76.30
	97 4B0 905 851	m	#1.8	74.05
	98 4B0 905 851 B	m	#1.8	61.65
	99 4B0 905 851	m	#1.8	74.05
	00-02 4B0 905 851 B	m	#1.8	61.65
Auto Trans	96-97 4D0 905 851	m	#1.8	76.30
	98-02 4B0 905 851 B	m	#1.8	61.65
	96-97 4A0 905 849 B	m	#1.8	30.05
	98-02 4A0 905 849	m	#1.8	62.50
#Included w/Lock Housing Assy				
#Includes R&I/R&R Steering Wheel				
12 Cylinder, Lock (a)				
w/Key	96 4D0 905 855 A	m	#2.2	d17.50
	97-98 4D0 905 855 J	m	#2.2	117.50
	99-02 4D0 905 855 G	m	#2.2	117.50
	96 107 905 855 G	m	#2.2	128.65
	97-02 107 905 855 CB	m	#2.2	118.15
w/o Key				
(a) Order by Application				
#Includes R&I/R&R Steering Wheel, Combination Switch & Lock Hsg Covers				
13 Grommet, Lock Cyl	8D0 905 869 01C	m		4.25
14 Contact, Switch	8D0 971 975	m		3.85
15 Column Unit, Steering				
1996				
To VIN T240000	8D1 419 502 E	m	2.7	610.00
From VIN T240001	8D1 419 502 F	m	2.7	610.00
AWD Quattro	8D1 419 502 E	m	2.7	610.00
1997	8D1 419 502 F	m	2.7	610.00
1998-02	8D0 419 502 F	m	2.7	610.00
16 Brkt, Column	1J0 419 378 F 01C	m		4.90
17 Screw, Attaching	4D0 419 699			2.50

ENGINE/TRANS

Use Procedure Explanation 12 with the following text.

1.8L ENG

R&I Engine/Trans Assy				m	7.2
-----------------------	--	--	--	---	-----

022-01153

1 Damper, Vibration				
w/A/C	97-00 058 105 251 E	m	.8	340.70
	01-02 068 105 243 D	m	.8	205.45
w/o A/C	058 105 251 D	m	.8	340.70
2 Cover, Up Timing				
1997-00				
2001	058 109 107 B	m	#2.2	7.20
To VIN 1402384	06A 109 108 K	m	#2.2	23.70
From VIN 1402385	06B 109 108 C	m	#2.2	23.70
2002	06B 109 108 C	m	#2.2	23.70
3 Cover, Lwr Timing	97-00 058 109 175 B	m	#2.2	7.18
	01-02 06A 109 175 B	m	#2.2	8.60
#R&R Complete, Includes R&R Vibration Damper				
4 Plate, Inr Cover	97-00 058 109 145 A	m		7.05
5 Belt, Timing				
1997-00				
To Eng AEB300000	058 109 119 D	m	#3.5	61.55
From Eng AEB300001	058 109 119 C	m	#3.5	58.30
2001-02	06B 109 119 F	m	#3.5	58.60
#Includes R&R Timing Covers & Vibration Damper				
6 Pulley, Cam	97-00 027 109 111 H	m	#2	53.65
	01-02 06B 109 111	m	#2	41.30
7 Pulley, Crank	027 105 263 B	m	#2	51.75
#w/Timing Belt Removed				
8 Pulley, Tension				
1997-00				
To Eng AEB300000	058 109 243 B	m	#3	674.90
From Eng AEB300001	058 109 243 E	m	#3	97.05